


# GPS Walker Quick Start Guide

## • Keys and Ports

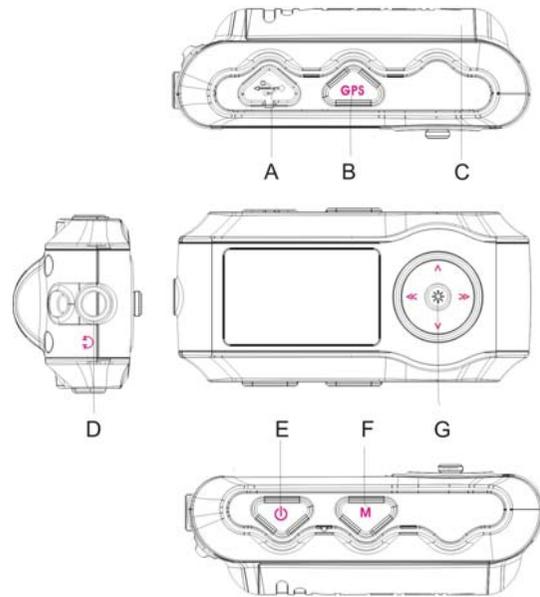

A: USB port	⊛: Play/Enter
B: GPS power on/off	<<: Left/Skip previous/Rewind
C: Battery compartment	>>: Right/Skip next/Forward
D: Earphone socket	∧: Up/Volume up
E: Power on/off	∨: Down/Volume down
F: Menu	
G: Control key	

Please visit [www.locosystech.com](http://www.locosystech.com) to download User Manual

## • GPS function

GPS Menu	Description
GPS Power	Turning On/Off the GPS function.
GPS Signal	Showing the satellite signal strength. Need 3 solid bars for precise positioning.
	Press the <b>Play</b> button to show the <b>Sat View</b> Shows the satellite number being seen, satellite number being tracked.
	Press the <b>Play</b> button again to show the <b>Position</b> Information such as Current Location coordinates, UTC Date and Time will be shown.
Log Interval	Setting the time interval for GPS position logging. The data is logged in standard NMEA format.
Mini Speed	Setting a value as the minimum speed for position logging. The system will log points only when the current speed is above this value. The minimum speed is valid only if <b>Log Interval</b> is enabled.
Mark	Marking the current location as a waypoint. This command is valid only when the current position fix is available (2D fix or 3D fix).
Mark&Go	Marking the current location as a waypoint and setting the waypoint as the destination in Compass menu. This command is valid only when the current position fix is available (2D fix or 3D fix).
Select Mark	Selecting recorded waypoints, and setting the waypoint and the destination in Compass page. This command is valid only when the current position fix is available (2D fix or 3D fix).
Compass	Displaying following information: <ul style="list-style-type: none"> <li>• Direction to destination</li> <li>• Distance to destination</li> <li>• Current Speed</li> <li>• ID of destination</li> </ul> Follow the compass. It will guide you to the destination. This command is valid only when the current position fix is available (2D fix or 3D fix).
About	Information about the firmware version.

## • GPS F/W upgrade

Use the MP3Updater.exe to upgrade firmware.

You can download MP3Updater.exe and other utilities at [www.locosystech.com](http://www.locosystech.com)

## • GPS data process

Use MINILINK.exe to download logs, download or upload POIs, and check the F/W version

You can download MINILINK.exe and other utilities at [www.locosystech.com](http://www.locosystech.com)