

20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

■ 886-2-8698-3699


_			
_			
	-	Wetack	ncom
(V VV VV	.iocos	1 0 S L C C I	1.00111

Product name	Description	Version
LS2003G-B2-T	GNSS smart antenna module/TTL,9600BPS,30x30mm	1 1
LS2003G-B2-R	GNSS smart antenna module/RS232,9600BPS,30x30mm	1.1

Datasheet of GNSS smart antenna module, LS2003G-B2





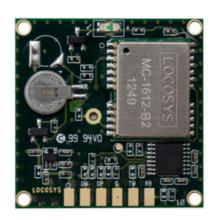

Top View

LS2003G-B2-T

LS2003G-B2-R

1 Introduction

LS2003G-B2 series products are complete standalone GNSS smart antenna modules, including an embedded antenna and GNSS receiver circuits, designed for a broad spectrum of OEM system applications. The product is based on the proven technology found in LOCOSYS GNSS SMD type receiver MC-1612-B2 that uses MediaTek chip solution. It can simultaneously acquire and track multiple satellite constellations that include GPS, BEIDOU, GALILEO, QZSS and SBAS. Besides, it can provide you with superior sensitivity and performance even in urban canyon and dense foliage environment. Its far-reaching capability meets the sensitivity requirements of car navigation as well as other location-based applications.

2 Features

- MediaTek high sensitivity solution
- Support GPS, BEIDOU, GALILEO and QZSS
- Capable of SBAS (WAAS, EGNOS, MSAS, GAGAN)
- Support 99-channel GNSS
- Low power consumption
- Fast TTFF at low signal level
- Built-in 12 multi-tone active interference canceller
- Free hybrid ephemeries prediction to achieve faster cold start
- Built-in data logger
- Up to 10 Hz update rate
- ±11ns high accuracy time pulse (1PPS)
- Indoor and outdoor multi-path detection and compensation
- Build-in micro battery to reserve system data for rapid satellite acquisition



- LED indicator for position fix or not fix
- Support RTCM SC-104 Version-2.x data input

3 Application

- Personal positioning and navigation
- Automotive navigation, model aircraft navigation
- Marine navigation
- Static timing application
- Surveying and mapping

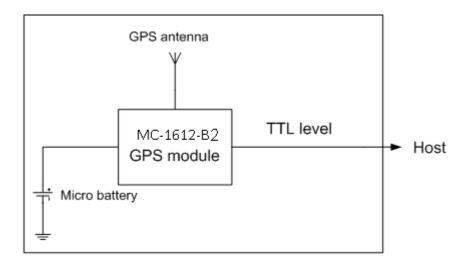


Fig 3-1 System block diagram of LS2003G-B2-T

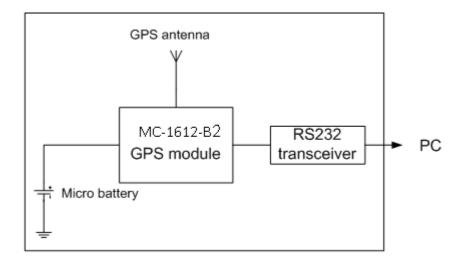


Fig 3-2 System block diagram of LS2003G-B2-R



4 GNSS receiver

Chip	MediaTek MT3333			
-	GPS, GALILEO, QZSS: L1 1575.42MHz, C/A code			
Frequency	BEIDOU: B1 1561.098MHz, C/A	code		
Channels	Support 99 channels (33 Tracking,	99 Acquisition)		
Update rate	1Hz default, up to 10Hz			
	Hot start (Open Sky)	1s (typical)		
Acquisition Time	Cold Start (Open Sky)	33s (typical) without AGPS		
		< 15s (typical) with AGPS (hybrid ephemeris prediction)		
D	Autonomous	2.5m CEP		
Position Accuracy	SBAS	2.5m (depends on accuracy of correction data)		
Datum	WGS-84 (default)			
Max. Altitude	< 18,000 m, up to 50,000m by request			
Max. Velocity	< 515 m/s			
Protocol	NR (F.A. 0102 4.00(1)	9600 bps ⁽²⁾ , 8 data bits, no parity, 1 stop bits (default)		
	NMEA 0183 ver 4.00 ⁽¹⁾	1Hz: GGA, GLL, GSA, GSV, RMC, VTG		
	Real-time Differential Correction	RTCM SC-104 v2.x message types 1,2,3, and 9		

Note (1): The default NMEA version is 4.00 and it also can configure to 4.10. If customers want to the product to support 4.10 please contact us in advance.

Note (2): Both baud rate and output message rate are configurable to be factory default.

5 LED indicator

The red LED is an indicator of GNSS positioning status. In continuous power mode, it flashes once per second when position is fixed. Otherwise it is off. The timing in detail is as below.

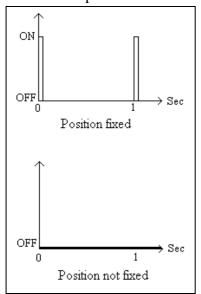


Fig 5.1 LED indicator of positioning status



6 Pin assignment and descriptions

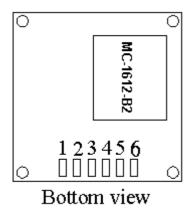


Fig 6.1 Pin assignment of LS2003G-B2-T, LS2003G-B2-R

LS2003G-B2-T

Pin#	Name	Туре	Description
1	VCC	P	Power input
2	RX	I	Data input (TTL level)
3	TX	О	Data output (TTL level)
4	GND	P	Ground
5	1PPS Output	О	1PPS output ,100ms pulse/sec
6	RTCM ⁽¹⁾	I	RTCM data input (TTL Level)

Note (1):It supports these RTCM message types: type 1, 2, 3, and 9. These four message types were all defined in RTCM SC-104 v2.0 spec, and also the same in v2.1, v2.2, v2.3 and v3.0.

• LS2003G-B2-R

Pin#	Name	Type	Description
1	VCC	P	Power input
2	RX	I	Data input (RS232 level)
3	TX	О	Data output (RS232 level)
4	GND	P	Ground
5	1PPS Output	О	1PPS output ,100ms pulse/sec
6	RTCM ⁽¹⁾	I	RTCM data input (TTL Level)

Note (1): It supports these RTCM message types: type 1, 2, 3, and 9. These four message types were all defined in RTCM SC-104 v2.0 spec, and also the same in v2.1, v2.2, v2.3 and v3.0.



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

■ 886-2-8698-3699 **©www.locosystech.com**

7 DC & Temperature characteristics

7.1 DC Electrical characteristics

Parameter	Symbol	Product	Min.	Тур.	Max.	Units
Input valtage	VCC	LS2003G-B2-T	3	3.3	4.3	V
Input voltage	VCC	LS2003G-B2-R	4	5	6	V
Lagrant assument	Taa	LS2003G-B2-T		25 ⁽¹⁾		A
Input current	Icc	LS2003G-B2-R		29 ⁽¹⁾		mA
High Level Input Voltage	VIH	LS2003G-B2-T	2.0		3.6	V
Low Level Input Voltage	VIL	LS2003G-B2-T	-0.3		0.8	V
High Level Input Current	Ітн	LS2003G-B2-T	-1		1	uA
Low Level Input Current	IIL	LS2003G-B2-T	-1		1	uA
High Level Output Voltage	Voh	LS2003G-B2-T	2.4		3.3	V
Low Level Output Voltage	Vol	LS2003G-B2-T			0.4	V
High Level Output Current	Іон	LS2003G-B2-T		2		mA
Low Level Output Current	Iol	LS2003G-B2-T		2		mA

Note (1): Measured when position fix is available, the function of self-generated ephemerisprediction is inactive.

7.2 Temperature characteristics


Parameter	Symbol	Product	Min.	Тур.	Max.	Units
On anoting Tommonotum	Тоти	LS2003G-B2-T	-40	1	85	S
Operating Temperature	Topr	LS2003G-B2-R				
Ct and a Tanan another	Та4 а	LS2003G-B2-T	-40	25	85	°C
Storage Temperature	Tstg	LS2003G-B2-R				C



www.locosystech.com

8 Mechanical specification

• LS2003G-B2-T, LS2003G-B2-R

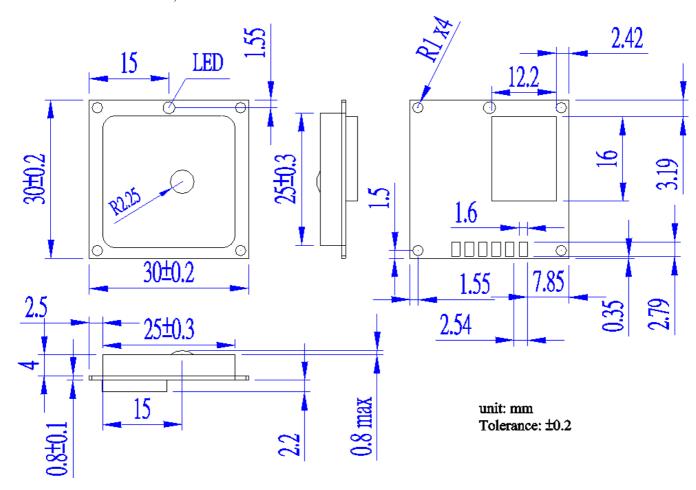



www.locosystech.com

20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698 886-2-8698-3699

9 Software interface

9.1 NMEA output message

Table 9.1-1 NMEA output message

NMEA record	Description	
GGA	Global positioning system fixed data	
GLL	eographic position - latitude/longitude	
GSA	GNSS DOP and active satellites	
GSV	GNSS satellites in view	
RMC	Recommended minimum specific GPS data	
VTG	Course over ground and ground speed	

• GGA--- Global Positioning System Fixed Data

Table 9.1-2 contains the values for the following example:

 $\$GNGGA,\!054506.000,\!2503.7191,\!N,\!12138.7473,\!E,\!2,\!18,\!0.66,\!126.1,\!M,\!15.3,\!M,\!0000,\!0000*7D$

Table 9.1-2 GGA Data Format

Name	Example	Units	Description
Message ID	\$GNGGA		GGA protocol header
UTC Time	054506.000		hhmmss.sss
Latitude	2503.7191		ddmm.mmmm
N/S indicator	N		N=north or S=south
Longitude	12138.7473		dddmm.mmmm
E/W Indicator	Е		E=east or W=west
Position Fix Indicator	2		See Table 9.1-3 (2: DGPS(RTCM) or SBAS)
Satellites Used	18		Range 0 to 33
HDOP	0.66		Horizontal Dilution of Precision
MSL Altitude	126.1	meters	
Units	M	meters	
Geoid Separation	15.3	meters	
Units	M	meters	
Age of Diff. Corr.	0000	second	Null fields when DGPS is not used
Diff. Ref. Station ID	0000		
Checksum	*7D		
<cr> <lf></lf></cr>			End of message termination

Table 9.1-3 Position Fix Indicators

Value	Description	
0	Fix not available or invalid	
1	GPS SPS Mode, fix valid	



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

2	Differential GPS, SPS Mode, fix valid
3-5	Not supported
6	Dead Reckoning Mode, fix valid

• GLL--- Geographic Position – Latitude/Longitude

Table 9.1-4 contains the values for the following example:

\$GNGLL,2503.7191,N,12138.7473,E,054506.000,A,D*44

Table 9.1-4 GLL Data Format

Name	Example	Units	Description
Message ID	\$GPGLL		GLL protocol header
Latitude	2503.7179		ddmm.mmmm
N/S indicator	N		N=north or S=south
Longitude	12138.7473		dddmm.mmmm
E/W indicator	Е		E=east or W=west
UTC Time	054506.000		hhmmss.sss
Status	A		A=data valid or V=data not valid
Mode	D		 N = No position fix A = Autonomous GNSS fix D = Differential GNSS fix R = RTK fixed F = RTK float E = Estimated/Dead reckoning fix
Checksum	*44		
<cr> <lf></lf></cr>			End of message termination

GSA---GNSS DOP and Active Satellites

Table 9.1-5 contains the values for the following example:

NMEA V4.0

\$GPGSA, A, 3, 09, 06, 17, 195, 193, 19, 02, 05, ,,,, 1.07, 0.71, 0.80*0A

\$BDGSA,A,3,13,01,02,09,30,08,27,28,07,06,,,1.07,0.71,0.80*16

NMEA V4.10

\$GNGSA,A,3,06,09,02,12,28,19,05,04,17,,,,0.93,0.60,0.72,1*03

\$GNGSA,A,3,03,07,02,08,10,01,13,09,27,28,30,,0.93,0.60,0.72,4*04

Table 9.1-5 GSA Data Format

Name	Example	Units	nits Description			
Message ID	\$GNGSA		GSA protocol header,			
			GP=GPS/QZSS, GL=GLONASS, GA=GALILEO,			
			BD=BEIDOU (GN for NMEA Ver 4.10)			



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

■ 886-2-8698-3699 **©www.locosystech.com**

Mode 1	A	See Table 9.1-6
Mode 2	3	See Table 9.1-7
ID of satellite used	06	Sv on Channel 1
ID of satellite used	09	Sv on Channel 2
ID of satellite used		Sv on Channel 12
PDOP	0.93	Position Dilution of Precision
HDOP	0.60	Horizontal Dilution of Precision
VDOP	0.72	Vertical Dilution of Precision
System ID	1	1: GPS, 2:GLONASS, 3:GALILEO, 4:BEIDOU
		(NMEA Ver 4.10 support only)
Checksum	*03	
<cr> <lf></lf></cr>		End of message termination

Table 9.1-6 Mode 1

Value	Description
M	Manual- forced to operate in 2D or 3D mode
A	Automatic-allowed to automatically switch 2D/3D

Table 9.1-7 Mode 2

Value	Description
1	Fix not available
2	2D
3	3D

• GSV---GNSS Satellites in View

Table 9.1-8 contains the values for the following example:

\$GPGSV, 3, 1, 11, 19, 72, 094, 35, 50, 60, 167, 31, 17, 55, 123, 34, 06, 50, 013, 37, 0*64

\$GPGSV, 3, 2, 11, 02, 38, 318, 31, 09, 38, 077, 28, 05, 37, 240, 35, 12, 24, 300, 28, 0*60

\$GPGSV, 3, 3, 11, 04, 14, 048, 24, 28, 11, 175, 26, 25, 02, 320,, 0*57

\$BDGSV,4,1,16,27,65,067,45,03,60,206,41,01,51,136,38,08,50,349,35,0*7B

\$BDGSV,4,2,16,10,43,228,38,13,41,314,40,30,40,328,40,02,39,242,37,0*77

\$BDGSV,4,3,16,04,39,117,36,07,35,200,36,06,27,171,31,16,24,175,,0*7A

\$BDGSV, 4, 4, 16, 20, 24, 216,, 28, 21, 115, 37, 05, 16, 258,, 09, 10, 189, 33, 0*7F

Table 9.1-8 GSV Data Format

Name	Example	Units	Description			
Message ID	\$GPGSV		GSV protocol header			
			GP=GPS/QZSS, GL=GLONASS, GA=GALILEO,			
			BD=BEIDOU			
Total number of messages ⁽¹⁾	3		Range 1 to 6			



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

www.locosystech.com

Message number ⁽¹⁾	1		Range 1 to 6			
Satellites in view	11					
Satellite ID ⁽²⁾	19		Channel 1 (Range 01 to 196)			
Elevation	72	degrees	Channel 1 (Range 00 to 90)			
Azimuth	094	degrees	Channel 1 (Range 000 to 359)			
SNR (C/No)	35	dB-Hz	Channel 1 (Range 00 to 99, null when not tracking)			
Satellite ID	06		Channel 4 (Range 01 to 196)			
Elevation	50	degrees	Channel 4 (Range 00 to 90)			
Azimuth	013	degrees	Channel 4 (Range 000 to 359)			
SNR (C/No)	37	dB-Hz	Channel 4 (Range 00 to 99, null when not tracking)			
Signal ID	0		GPS/QZSS: All signal=0,			
			GLONASS: All signal=0, G1 C/A=1			
			GALILEO: All signal=0,			
			BEIDOU: All signal=0			
			NMEA Ver 4.10 support only			
Checksum	*64					
<cr> <lf></lf></cr>			End of message termination			

Note (1): Depending on the number of satellites tracked multiple messages of GSV data may be required.

Note (2): GPS ID: 01~32, SBAS ID: 33~64, QZSS ID: 193~196, BEIDOU ID: 01~32, GALILEO ID: 01~32.

• RMC---Recommended Minimum Specific GNSS Data

Table 9.1-9 contains the values for the following example:

\$GNRMC,183015.000,A,2503.7123,N,12138.7446,E,0.01,34.92,270812,,,D,V*39

Table 9.1-9 RMC Data Format

Name	Example	Units	Description
Message ID	\$GNRMC		RMC protocol header
UTC Time	183015.000		hhmmss.sss
Status	A		A=data valid or V=data not valid
Latitude	2503.7123		ddmm.mmmm
N/S Indicator	N		N=north or S=south
Longitude	12138.7446		dddmm.mmmm
E/W Indicator	E		E=east or W=west
Speed over ground	0.01	knots	True
Course over ground	34.92	degrees	
Date	270812		ddmmyy
Magnetic variation		degrees	
Variation sense			E=east or W=west (Not shown)



www.locosystech.com

		N = No position fix
		A = Autonomous GNSS fix
Mada	D	D = Differential GNSS fix
Mode	D	R = RTK fixed
		F = RTK float
		E = Estimated/Dead reckoning fix
		S = Safe
Naniantianal status		C = Caution
Navigational status indicator	V	U = Unsafe
		V = Void
		(NMEA Ver 4.10 support only)
Checksum	*39	
<cr> <lf></lf></cr>		End of message termination

• VTG---Course Over Ground and Ground Speed

Table 9.1-10 contains the values for the following example:

\$GNVTG,34.92,T,,M,0.01,N,0.02,K,D*07

Table 9.1-10 VTG Data Format

Name	Example	Units	Description
Message ID	\$GNVTG		VTG protocol header
Course over ground	34.92	degrees	Measured heading
Reference	Т		True
Course over ground		degrees	Measured heading
Reference	M		Magnetic
Speed over ground	0.01	knots	Measured speed
Units	N		Knots
Speed over ground	0.02	km/hr	Measured speed
Units	K		Kilometer per hour
			N = No position fix
			A = Autonomous GNSS fix
Mode	D		D = Differential GNSS fix
Mode	D		R = RTK fixed
			F = RTK float
			E = Estimated/Dead reckoning fix
Checksum	*07		
<cr> <lf></lf></cr>			End of message termination



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698


www.locosystech.com

9.2 Proprietary NMEA input message Please refer to MTK proprietary message.

9.3 Examples to configure the power mode of GNSS module

9.3.1 Standby mode

User can issue software command to make GNSS module go into standby mode that consumes less than 500uA current. GNSS module will be awaked when receiving any byte. The following flow chart is an example to make GNSS module go into standby mode and then wake up.

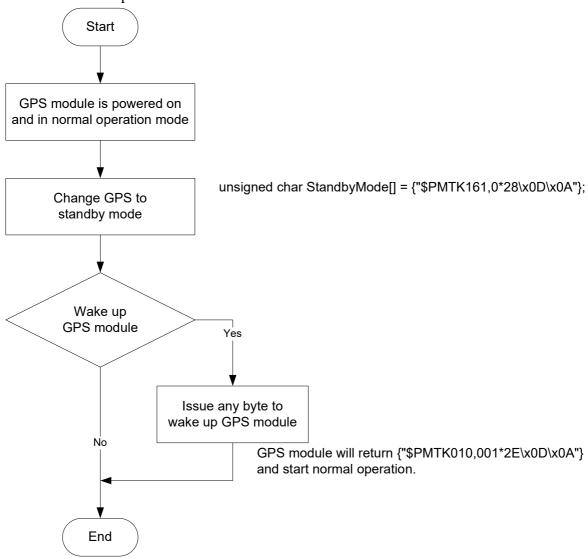


9.3.2 Periodic mode

When GNSS module is commanded to periodic mode, it will be in operation and standby periodically. Its status of power consumption is as below chart.




20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

www.locosystech.com

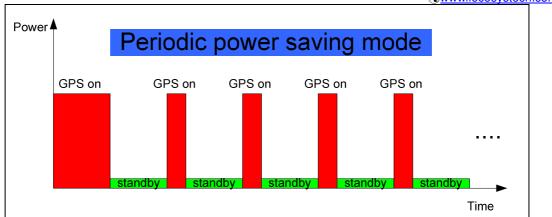

The following flow chart is an example to make GNSS module go into periodic mode and then back to normal operation mode.

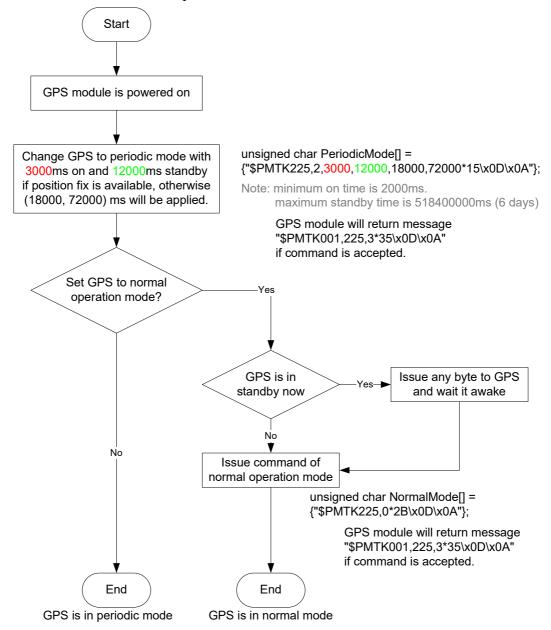




9.3.3 AlwaysLocateTM mode

AlwaysLocateTM is an intelligent controller of periodic mode. Depending on the environment and motion conditions, GNSS module can adaptively adjust working/standby time to achieve balance of positioning accuracy and power consumption. In this mode, the host CPU does not need to control GNSS module until the host CPU needs the GNSS position data. The following flow chart is an example to make GNSS module go into AlwaysLocateTm mode and then back to normal operation mode.

Note: AlwaysLocateTM is a trade mark of MTK.

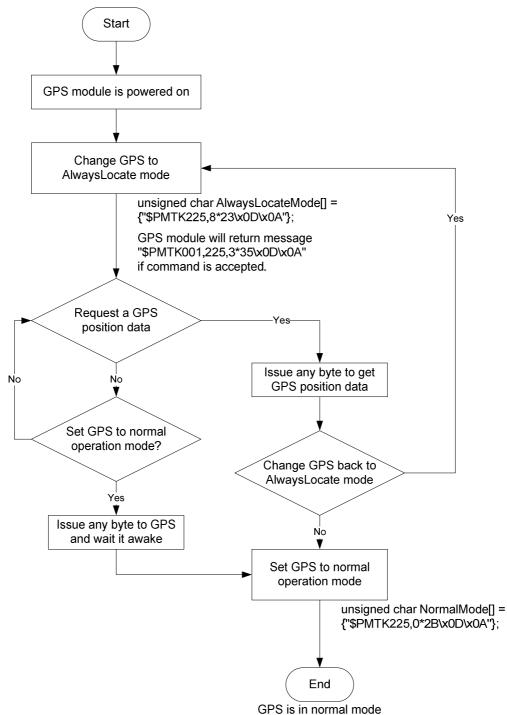



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

www.locosystech.com

9.4 Data logger

The GNSS module has internal flash memory for logging GNSS data. The configurations include time interval, distance, speed, logging mode, and ... etc. For more information, please contact us.

9.5 Examples to configure the update rate of GNSS module

The GNSS module supports up to 10Hz update rate that user can configure by issuing software commands. Note that the configurations by software commands are stored in the battery-backed SRAM that is powered through VBACKUP pin. Once it drains out, the default/factory settings will be applied.

Due to the transmitting capacity per second of the current baud rate, GNSS module has to be changed to higher baud rate for high update rate of position fix. The user can use the following software commands to change baud rate.

Baud rate	Software command
Factory default	\$PMTK251,0*28 <cr><lf></lf></cr>
4800	\$PMTK251,4800*14 <cr><lf></lf></cr>
9600	\$PMTK251,9600*17 <cr><lf></lf></cr>
19200	\$PMTK251,19200*22 <cr><lf></lf></cr>
38400	\$PMTK251,38400*27 <cr><lf></lf></cr>
57600	\$PMTK251,57600*2C <cr><lf></lf></cr>
115200	\$PMTK251,115200*1F <cr><lf></lf></cr>

Note: <CR> means Carriage Return, i.e. 0x0D in hexadecimal. <LF> means Line Feed, i.e. 0x0A in hexadecimal.

If the user does not want to change baud rate, you can reduce the output NMEA sentences by the following software commands.

NMEA sentence	Software command
Factory default	\$PMTK314,-1*04 <cr><lf></lf></cr>
Only GLL at 1Hz	\$PMTK314,1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0
Only RMC at 1Hz	\$PMTK314,0,1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0*29 <cr><lf></lf></cr>
Only VTG at 1Hz	\$PMTK314,0,0,1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0
Only GGA at 1Hz	\$PMTK314,0,0,0,1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0
Only GSA at 1Hz	\$PMTK314,0,0,0,0,1,0,0,0,0,0,0,0,0,0,0,0,0,0,0
Only GSV at 1Hz	\$PMTK314,0,0,0,0,1,0,0,0,0,0,0,0,0,0,0,0,0,0*29 <cr><lf></lf></cr>
Only ZDA at 1Hz	\$PMTK314,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,1,0*29 <cr><lf></lf></cr>
RMC, GGA, GSA	\$DMTV214 0 1 0 1 1 5 0 0 0 0 0 0 0 0 0 0 0 0 0 0
at 1Hz and GSV at	\$PMTK314,0,1,0,1,1,5,0,0,0,0,0,0,0,0,0,0,0,0,0*2C <cr><lf></lf></cr>



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

www.locosystech.com

0.2Hz							
If the command is	correct and	d executed,	GNSS	module	will	output	message
\$PMTK001.314.3*3	6 <cr><lf></lf></cr>	>					

After the GNSS module is changed to higher baud rate or reduced NMEA sentence, the user can configure it to high update rate of position fix by the following commands.

Interval of position fix	Software command
Every 100ms (10Hz) ⁽¹⁾	\$PMTK220,100*2F <cr><lf></lf></cr>
Every 200ms (5Hz)	\$PMTK220,200*2C <cr><lf></lf></cr>
Every 500ms (2Hz)	\$PMTK220,500*2B <cr><lf></lf></cr>
Every 1000ms (1Hz)	\$PMTK220,1000*1F <cr><lf></lf></cr>
Every 2000ms (0.5Hz) ⁽²⁾	\$PMTK220,2000*1C <cr><lf></lf></cr>
If the command is correct and executed, GNSS module will	
output message \$PMTK001,220,3*30 <cr><lf></lf></cr>	

Note 1: The minimum interval of position fix is 100ms, i.e. the maximum update rate is 10Hz.

Note 2: The current consumption is the same with the update rate of 1Hz.

9.6 Configure the static navigation parameter

The output position of GNSS module will keep the same and output speed will be zero if the actual speed is below the threshold of the static navigation parameter. This is useful for different applications. For example, the car stopped at a red light will get stationary GNSS position if the threshold is 1.5m/s. It is better to disable this function by setting threshold to 0 for pedestrian navigation.

The format of the software command is as below.


\$PMTK386,speed threshold*checksum<CR><LF>

The unit of speed threshold is meter per second. The range of speed threshold is from 0.1m/s to 2.0m/s. Value 0 is to disable the function.



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698

www.locosystech.com

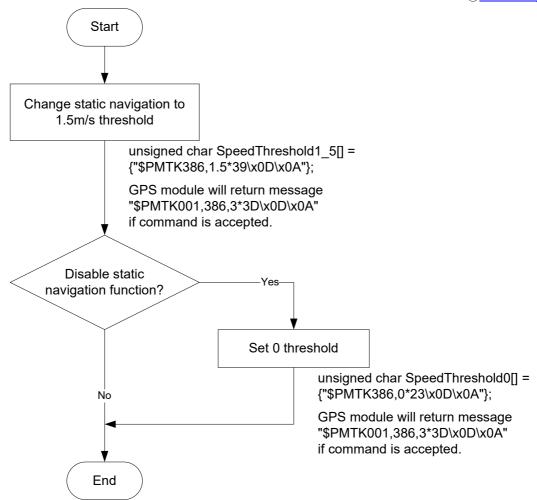



20F.-13, No.79, Sec. 1, Xintai 5th Rd., Xizhi District, New Taipei City 22101, Taiwan 886-2-8698-3698 886-2-8698-3699

Document change list

Revision 1.0

• First release on Aug 11, 2014.

Revision 1.1(July 24, 2020)

- Revised protocol support NMEA 0183 version from 4.10 to 4.00 in the section 4.
- Added "Note 1" in the section 4.
- Revised section 9.1 NMEA output message.